

How To Measure Your Windows

NB: USE METAL MEASURING TAPE TO ENSURE ACCURACY OF MEASUREMENTS

Please be as accurate as possible when measuring, it's always best to measure twice, to avoid mistakes.


1 2 3 easy steps to correctly measure your window

1 Choose Mount Type

Start by looking at your window to decide how you want your blinds to be installed.

Recess/Inside Fit

Recess Fit is where the curtains or blinds are installed inside the window framing. Recess which is around 90mm deep is enough space for recess fit

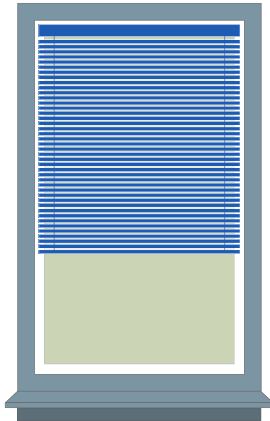

Face/Outside Fit

Face Fit is where the curtains or blinds are installed on or above the window framing (Architrave) width. Ideal for a depth which is less than 60mm




2 Measure Window

Measuring for Recess Fit


Measure the width at the top, middle and bottom. If the three points are uneven, use the narrowest of the three measurements.

Measure the height at left, middle and right. If the three points are uneven, the longest measurement will be used.

Width

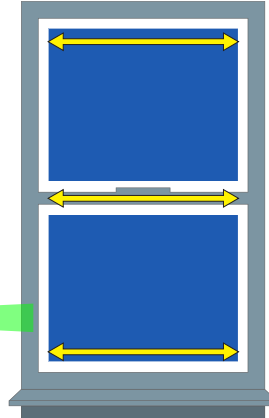

Height

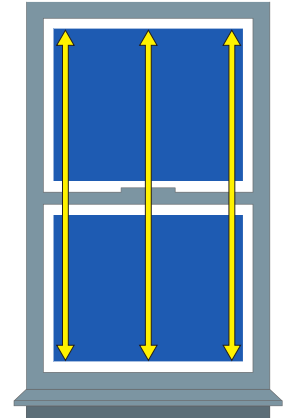

The width and height measurements should be rounded down by a small tolerance of 4mm for fitting the recess in a best possible way.

3 Choose Mount Type

Record all your measurements and window details on the attached window measurement worksheet.

Window Information				Width Measurements			Height Measurements		
Room	Blind Type	Colour	Face/Recess	Top	Middle	Bottom	Top	Middle	Bottom
Lounge Room	Roller Blind	Stone	Face	900	900	900	2105	2105	2100
			Recess	Recess fit use smallest measurement:		900	Recess fit use smallest measurement:		2100

Record all measurements in millimetres (mm). This will ensure accuracy of selecting the right sized blind for your windows.

Request a Quote

Completed measurement worksheet must be sent to the following email address:

quoteme@chrissysblinds.co.za


In response, we will send you a quotation based on your measurement as per received email.

Measuring for Face Fit (Outside Mount)


Measure the top, middle and bottom outside edges of the window moulding. Add 100 - 200mm to ensure light control and privacy.

Measure the exact height of the window moulding from the top edge to the bottom edge. Add not less than 150mm to accommodate the panel rail at the top, bottom edge privacy and light control.

Width

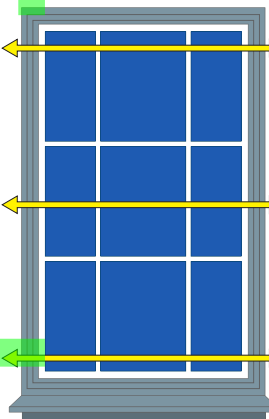

Height

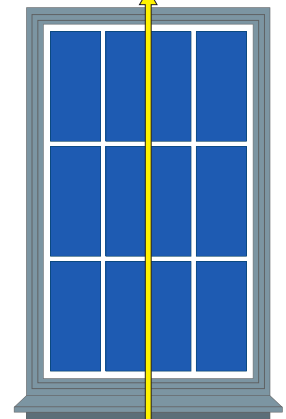

You are welcomed to contact us if you require assistance with measurements (Call-out fee is applicable)

Example:

Window Information				Width Measurements			Height Measurements		
Room	Blind Type	Size & Code	Face/Recess	Top	Middle	Bottom	Left	Middle	Right
Lounge Room	Venetian Aluwood	50mm 2084	Face	900	900	900	2105	2105	2100
			Recess	Recess fit use smallest measurement:		900	Recess fit use longest measurement:		2100

Window Information				Width Measurements			Height Measurements		
Room	Blind Type	Size & Code	Face/Recess	Top	Middle	Bottom	Left	Middle	Right
			Face						
			Recess	Recess fit use smallest			Recess fit use longest measurement:		

Room	Blind Type	Size & Code	Face/Recess	Top	Middle	Bottom	Left	Middle	Right
			Face						
			Recess	Recess fit use smallest measurement:			Recess fit use longest measurement:		

Room	Blind Type	Size & Code	Face/Recess	Top	Middle	Bottom	Left	Middle	Right
			Face						
			Recess	Recess fit use smallest measurement:			Recess fit use longest measurement:		

Room	Blind Type	Size & Code	Face/Recess	Top	Middle	Bottom	Left	Middle	Right
			Face						
			Recess	Recess fit use smallest measurement:			Recess fit use longest measurement:		

Room	Blind Type	Size & Code	Face/Recess	Top	Middle	Bottom	Left	Middle	Right
			Face						
			Recess	Recess fit use smallest measurement:			Recess fit use longest measurement:		

Room	Blind Type	Size & Code	Face/Recess	Top	Middle	Bottom	Left	Middle	Right
			Face						
			Recess	Recess fit use smallest measurement:			Recess fit use longest measurement:		

Customer Details

Name & Surname :

Address :

Cell & Email :